




# Tire Bead Breaker Instructions for Part # BW-2065



## General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.

## Parts

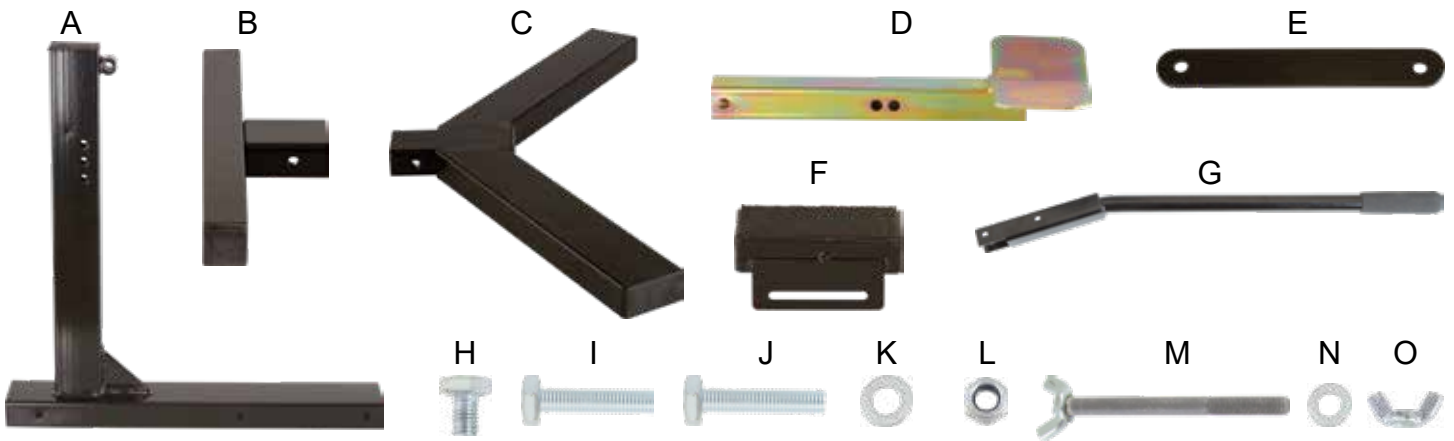

Part	Description	Quantity
A	Main Base Section	1
B	Back Base Section	1
C	Front Base Section	1
D	Pressure Plate	1
E	Pressure Plate Bracket	2
F	Tire Block	1
G	Handle	1
H	M8x15 Bolt	4


Part	Description	Quantity
I	M8x45 Bolt	2
J	M8x50 Bolt	2
K	M8 Washer	8
L	M8 Lock Nut	4
M	M6x75 Wing Bolt	1
N	M6 Washer	2
O	M6 Wing Nut	1

## Tools Required


- 13mm wrench
- 14mm wrench

# Assembly


**Step 1:** Connect the three base sections (A, B, C) using the four M8x15 bolts (H). Tighten with a 14mm wrench.

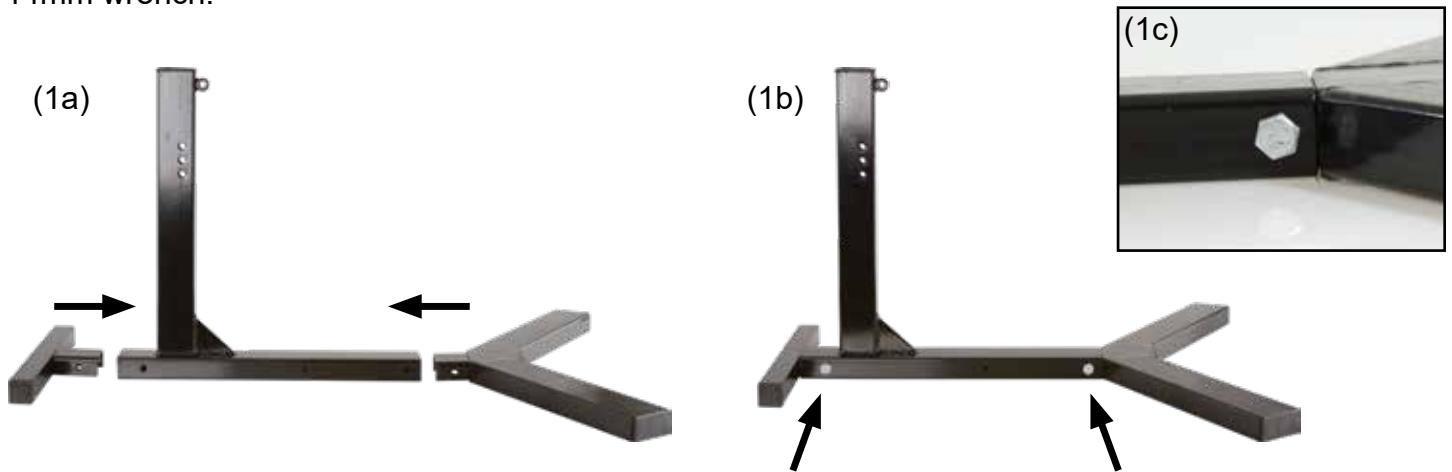



**Step 2:** Attach the handle (G) to the base (A) using one M8x45 bolt (I), two washers (K), and one lock nut (L). Tighten with a 13mm wrench and 14mm wrench.

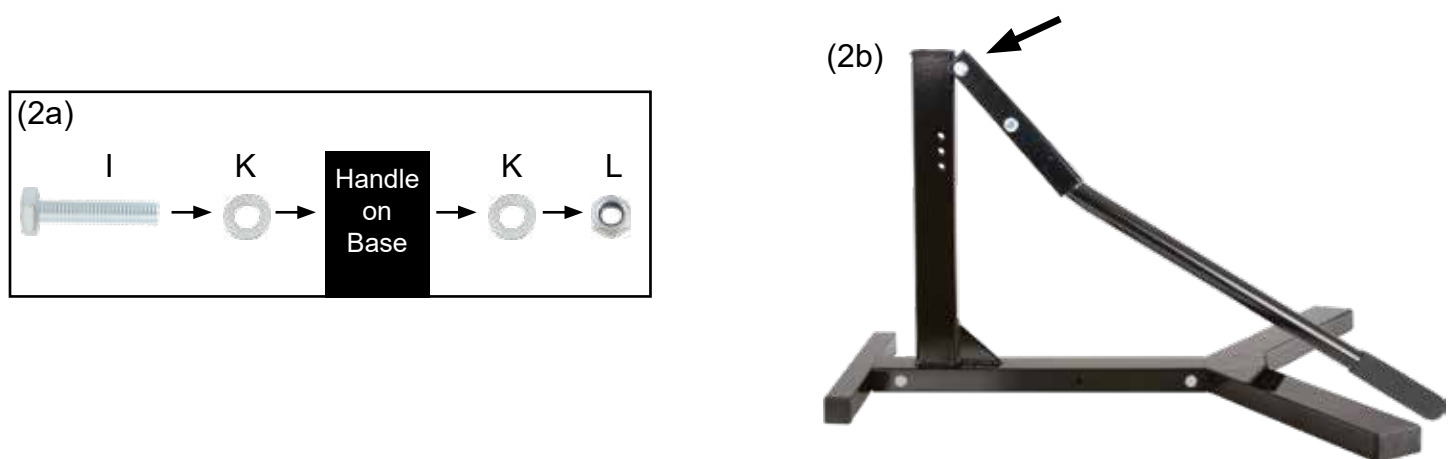



**Step 3:** Attach the pressure plate (D) to the main base (A) using the two pressure plate brackets (E), two M8x50 bolts (J), four washers (K), and two lock nuts (L). Three adjustment holes allow you to place the pressure plate at different pivot angles for easier use. Tighten with a 13mm wrench and 14mm wrench.

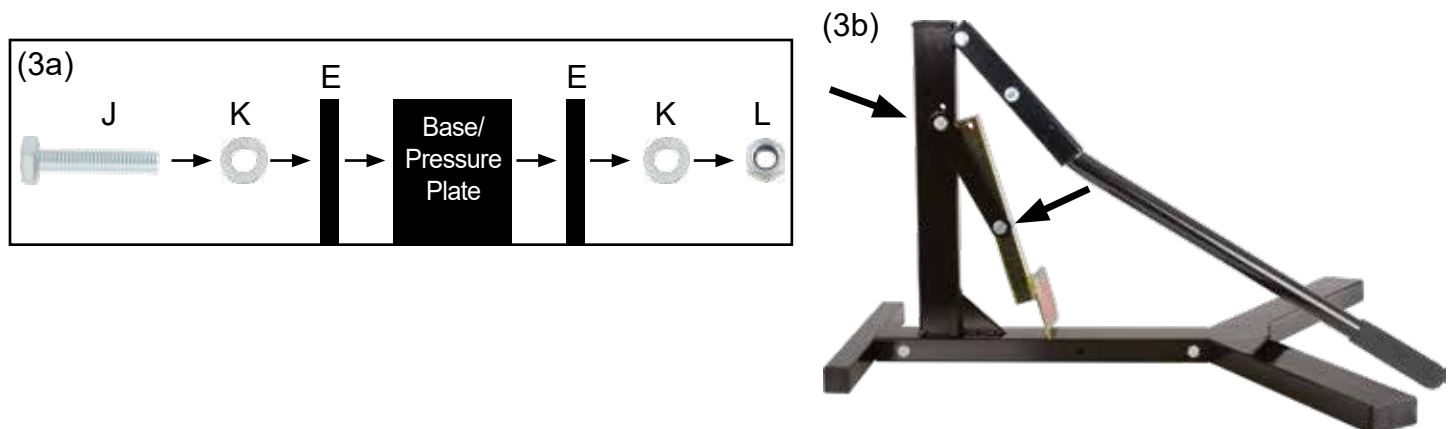

**Step 4:** Connect the pressure plate (D) to the handle (G) using one M8x45 bolt (I), two washers (K), and one lock nut (L). Tighten with a 13mm wrench and 14mm wrench.

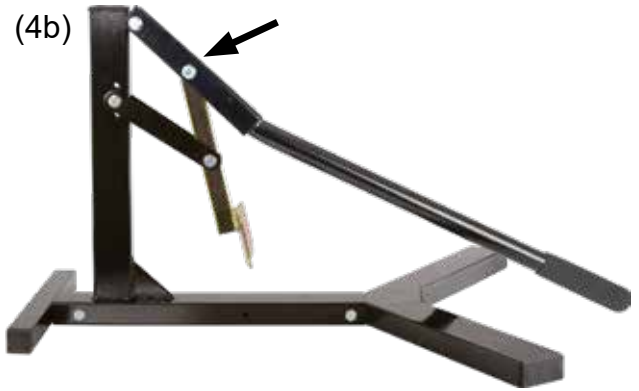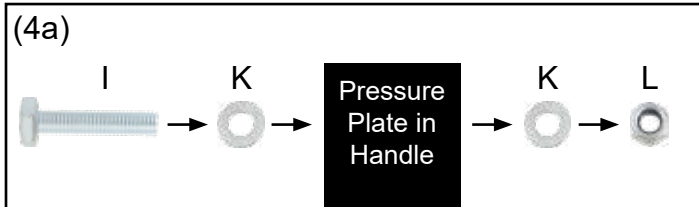

**Step 5:** Attach the tire block (F) to the base (A) using the wing bolt (M), washers (N), and wing nut (O). The block is adjustable to accommodate different wheels.

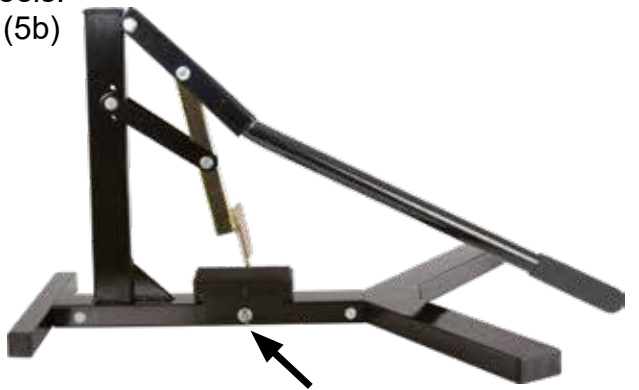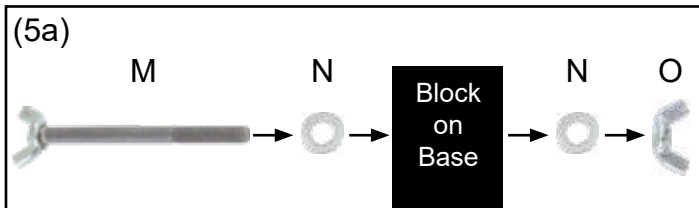

## Use

1. Before breaking the bead, remove the valve stem core to let the air out of the tire.
2. Place the wheel on the tire block. Adjust as necessary to align the edge of the rim with the pressure plate.
3. Pull down on the handle and apply pressure until you hear a “pop.” The bead is now broken and the tire can be removed.



# Product Warranty and Liability

**GENERAL PRODUCT WARRANTY:** Products purchased from the Authorized Dealer (original place of purchase) or Merchant (“Dealer”) will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer’s website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

**\*\*\*Warranty claims must be made directly to the original place of purchase.\*\*\***

**WARRANTY PERIOD:** This warranty remains in force for one year from the date of the product’s accepted delivery. The Authorized Dealer offers a one year manufacturer’s warranty for most products unless otherwise specified on the product advertisement.

**WARRANTY SERVICE:** The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

**WARRANTY LIMITATIONS:** The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

**LIMITED LIABILITY:** In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

